

# DSE814

## AVR USB COMMUNICATIONS INTERFACE

The DSE814 provides an interface between the AVR and a PC, allowing access to the AVR settings via the DSE Configuration Suite PC Software

**THE KIT INCLUDES:**

- DSE814 interface
- USB lead
- Connection cables



**ENVIRONMENTAL TESTING STANDARDS**

**ELECTRICAL SAFETY**

BS EN 60950  
Safety of Information Technology Equipment, including Electrical Business Equipment

**SPECIFICATION**

**DC SUPPLY**

Powered from the USB connection

**OPERATING TEMPERATURE RANGE**

-30 °C to +70 °C  
-22 °F to +158 °F

**DIMENSIONS**

90 mm x 50 mm x 25 mm  
3.5" x 2" x 1"



**RELATED MATERIALS**

TITLE	PART NO'S
DSEA106 Data Sheet	055-196
DSEA106 Installation Instructions	053-177
DSEA106 Operator Manual	057-241
DSEA106 Configuration Suite PC Software Manual	057-242

**DEEP SEA ELECTRONICS PLC UK**

Highfield House, Hunmanby Industrial Estate, Hunmanby YO14 0PH  
**TELEPHONE** +44 (0) 1723 890099 **FACSIMILE** +44 (0) 1723 893303  
**EMAIL** sales@deepseapl.com **WEBSITE** www.deepseapl.com

**DEEP SEA ELECTRONICS INC USA**

3230 Williams Avenue, Rockford, IL 61101-2668 USA  
**TELEPHONE** +1 (815) 316 8706 **FACSIMILE** +1 (815) 316 8708  
**EMAIL** sales@deepseausa.com **WEBSITE** www.deepseausa.com