


TYPICAL WIRING DIAGRAM

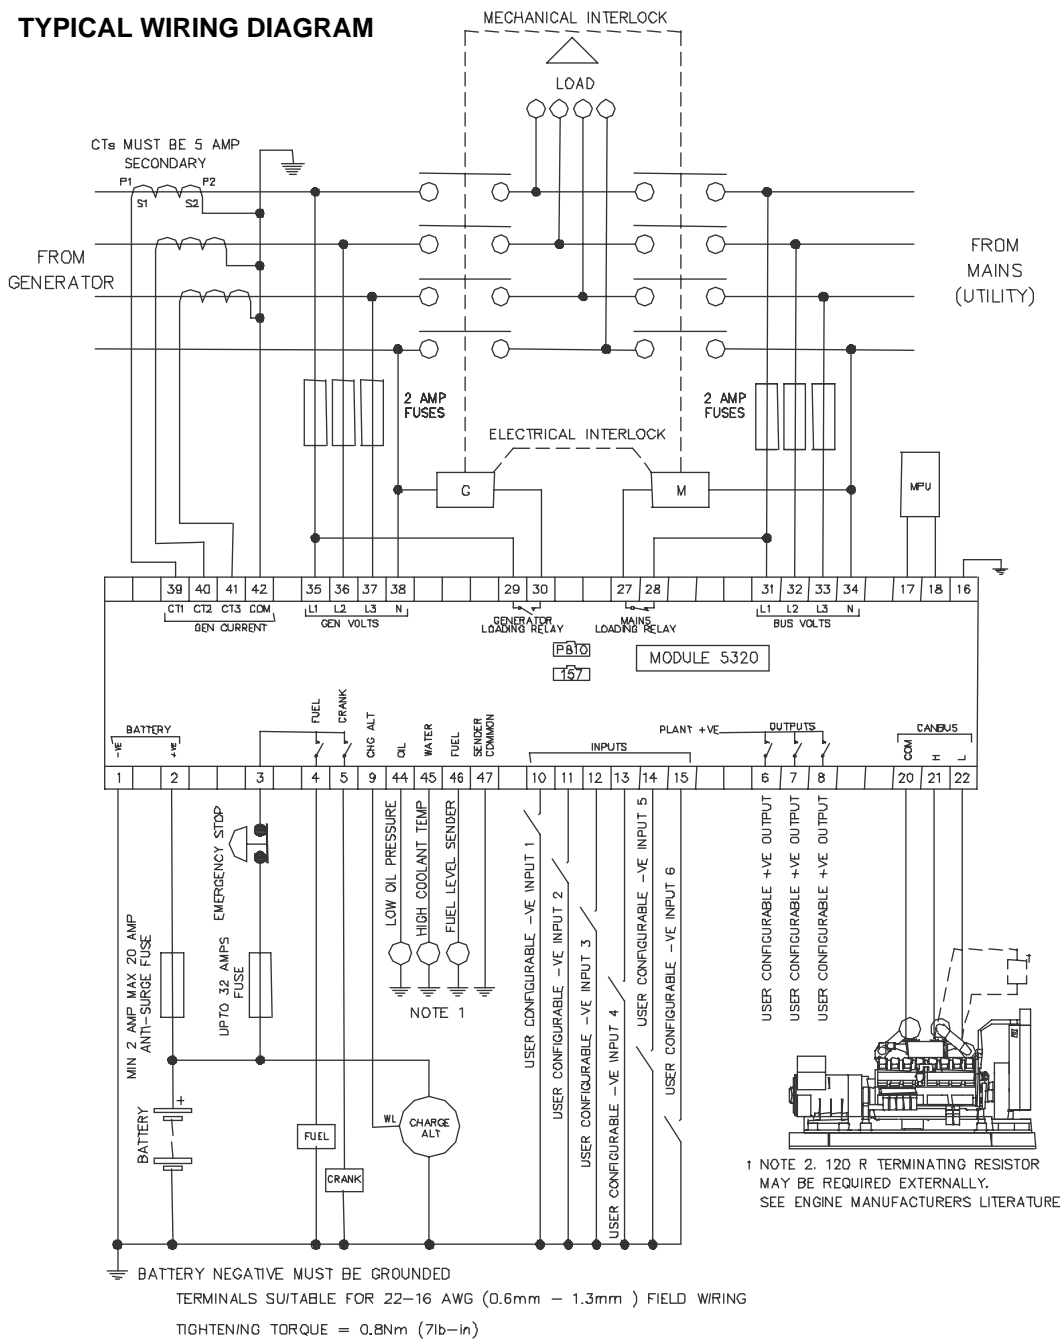

NOTE 1
THESE GROUND CONNECTIONS MUST BE ON THE ENGINE BLOCK, AND MUST BE TO THE SENDER BODIES.
THE GROUND WIRE TO TERMINAL 47 MUST NOT BE USED TO PROVIDE A GROUND CONNECTION TO ANY OTHER DEVICE


DIMENSIONS : 240mm x 172mm x 57mm
(9.5" x 6.8" x 2.25")
PANEL CUTOUT : 220mm x 160mm
(8.7" x 6.3")




5320 INSTALLATION INSTRUCTIONS

ACCESSING THE FRONT PANEL CONFIGURATION EDITOR

- Press the Stop/Reset and Info buttons simultaneously
- If a module security PIN has been set, the PIN number request is then shown (The first * is flashing) :



- Press + or - buttons to adjust it to the correct value. Press ✓ when the first digit is correctly entered. Repeat this process for the other digits of the PIN number.
- When ✓ is pressed after editing the final PIN digit, the PIN is checked for validity. If the number is not correct, the editor is automatically exited. To retry you must re-enter the editor as described above.
- If the PIN has been successfully entered (or the module PIN has not been enabled) the first configurable parameter is displayed :

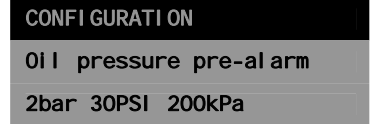

EDITING A PARAMETER

- Enter the editor as described above.
- Press the + and - buttons to cycle to the parameter you wish to change.
- Press the ✓ button to enter edit mode. When in edit mode (indicated by the flashing parameter) pressing the + and - buttons will adjust the parameter to the desired value.
- For *date and time* editing only: press to select between day, month, year, hours and minutes.
- Press the ✓ button to 'save' the value. The value will stop flashing to confirm that it has been saved.
- To select another value to edit, press the + button. Continuing to press the + and - buttons will cycle through the adjustable parameters as shown overleaf.
- To exit the front panel configuration editor at any time, press the Stop/Reset button. Ensure you have saved any changes you have made by pressing the ✓ button first.

NOTE:- When the editor is visible, it is automatically exited after 5 minutes of inactivity to ensure security.

NOTE:- The PIN number is automatically reset when the editor is exited (manually or automatically) to ensure security.

NOTE:- More comprehensive module configuration is possible using the 5xxx series PC configuration software in conjunction with the P810 PC interface. Please contact us for further details.

Deep Sea Electronics Plc.
Highfield House, Hunmanby Industrial Estate,
North Yorkshire. YO14 0PH.
ENGLAND
Tel:+44 (0)1723 890099.
Fax: +44 (0)1723 893303.
LO CALL (from UK BT landlines) :
Telephone 0845 260 8900. Fax 0845 260 8901
Email: sales@deepseapl.com
Web: www.deepseapl.com

Deep Sea Electronics inc.
3230 Williams Avenue
Rockford, Illinois 61101-2668,
U.S.A.
Phone: +1 (815) 316-8706.
Fax: +1 (815) 316- 8708
TOLL FREE (USA only) : Tel: 1 866 636 9703
Email: dsesales@deepseausa.com
Web: www.deepseausa.com

